



# AIRCRAFT WORKSHEET

Reference: 150509

Sheet 1 of 2

A/C  
Type: Rans S6 ESReg: **G-RTHS**

Serial No: PFA 204-14753

Item No	Defect or work required	Rectification or work carried out	Eng'	Insp'
1	Split nose bowl in two as per mod 12555	Mark out cut lines and positions of the rivet holes and the fastener holes on the nose bowl		
2		Cut along the cut line marked and de-burr		
3		Cut two backing strips 40mm wide and mark the centre line along the strips		
4		Drill No. 30 and cleco strips to lower nosebowl and then position the upper nosebowl and drill No. 30 and cleco upper nosebowl		
5		Fit quick fastener receptacles to backing strip, open out holes in upper nosebowl to 1/4 and test fit.		
6		Rivet backing strip to lower nosebowl		
7		Confirm tightness of all new quick release fasteners.		

**Permit Maintenance Release: The work recorded above has been completed to my satisfaction and in that respect the aircraft is considered fit for flight.**

Name:	Signed:	Insp. No.:	Date:
-------	---------	------------	-------

All worksheets should be attached or referenced in the logbooks of the aircraft to which they refer and are considered to be part of the aircraft's legal maintenance record.



# AIRCRAFT WORKSHEET

Reference: 150509


Sheet 2 of 2

A/C  
Type: Rans S6 ES

Reg: **G-RTHS**

Serial No: PFA 204-14753

Photos of work carried out

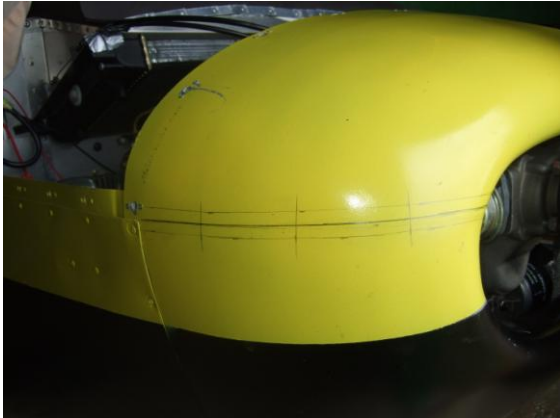

Mark put cut line and hole positions



Cut nose bowl



Cleco backing plate



Cleco top cowling



Fit fastener receptacles



Finished result.